



TRENCHES UNDER ROADS

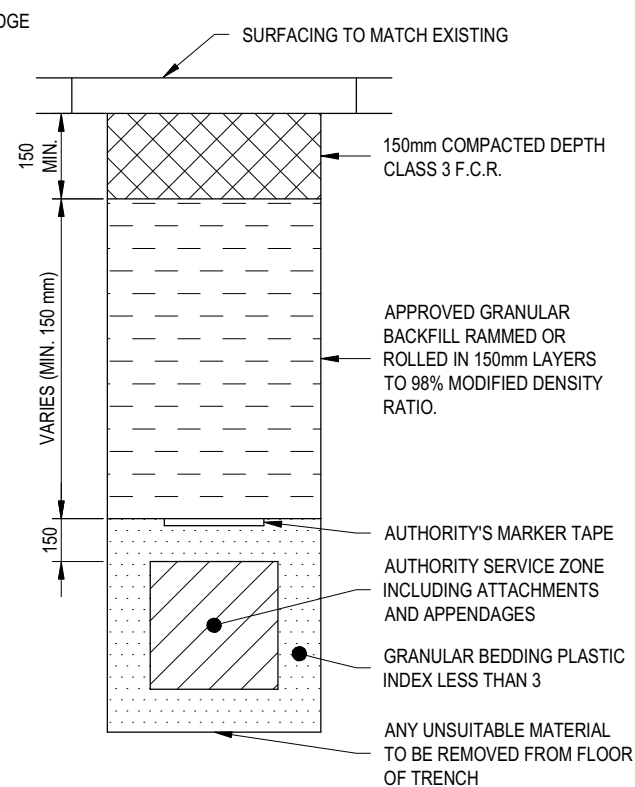

TRENCHES UNDER FOOTPATHS

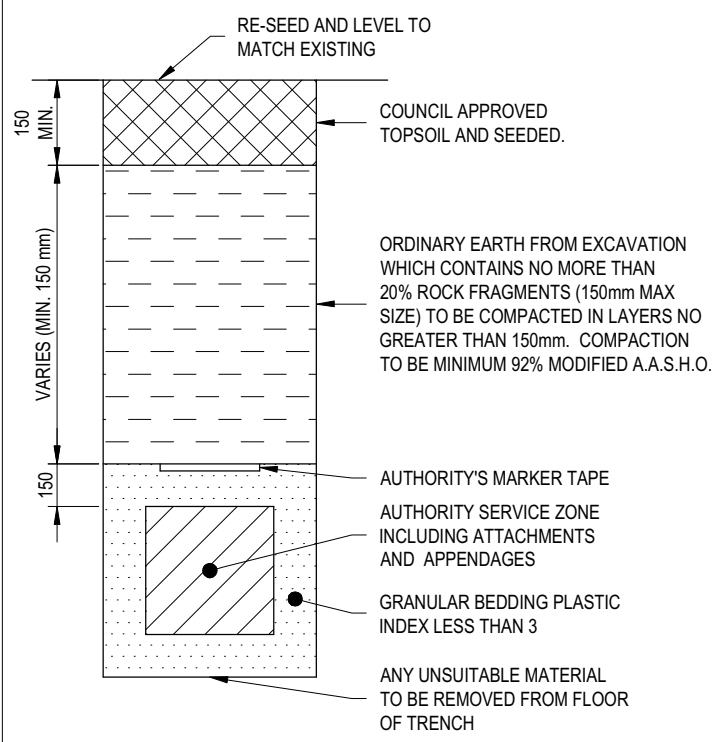

TRENCHES UNDER SWALES

NOTES:

1. COMPULSORY MEASURES FOR THE PROTECTION OF TRENCHES 1.5m OR MORE IN DEPTH ARE TO COMPLY WITH THE REQUIREMENTS OF THE MINES ACT 1958 & O.H.&S. ACT 1985.
2. BITUMEN ROAD SURFACE SHALL BE CUT WITH A SAW.

ALL MEASUREMENTS IN MILLIMETRES

**TRENCHING BACKFILL
(TRENCHES WITHIN 1m OF COUNCIL ASSETS)**

LAST UPDATED 29/03/2016

SD 310

Infrastructure Design Manual Standard Drawings

A copy of the Infrastructure Design Manual can be viewed on the Design Manual website www.designmanual.com.au

NOT TO SCALE